

SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS AND SAVE THIS INFORMATION.

Should you discover any of the following:

- A. Cut, damaged, or frayed wire insulation.
- B. Cracks in the lamp holders or enclosures.
- Loose connections or exposed wire.


DO NOT PLUG IN THE TREE.

CONTACT THE DEALER WHERE IT WAS PURCHASED.

1. Before using and prior to each season
Inspect product carefully.
2. When not in use store tree in cool, dry, location protected from sunlight.
Temperature not to exceed 100F.
3. Do not use this tree for other than its intended use as an indoor decoration.
4. Unplug the tree when leaving home, retiring for the night, or if it is to be left unattended.
5. Do not let the lamps rest upon any electrical cord or the branch wire.
6. This is not a toy. To avoid risk of fire, burns, personal injury, electrical shock, etc. The tree should not be disturbed except for set-up and take down.
7. Do not place near gas or electric heaters or near fireplaces.
8. Do not decorate or cover the tree with any flammable products.
9. Hang ornaments only on the tree branches, not on electrical wires.
10. This tree employs an overload protection fuse. If a fuse blows unplug the tree from the wall. Also unplug any items you may have plugged into the tree system. A blown fuse indicates an overload or short circuit situation. Replace the fuse per the user servicing instructions and check the tree. If the new fuse blows contact your dealer for repair.

ASSEMBLY INSTRUCTIONS


1. Before assembling your tree, choose a location near a wall outlet. Be sure the surface is level.

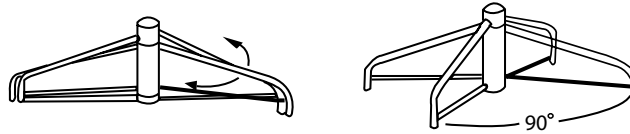

2. Pull apart the legs of the stand until it forms an "X" and line up the thumbscrew holes
3. Carefully screw each thumbscrew into the holes only until you can see or feel the screw flush with the inside of the tube.
4. Place the stand where you plan to use the tree.
5. Carefully insert the bottom section of the tree (marked with the highest letter) into the stand. Tighten thumbscrews so tree is level and secure.
6. Remove bottom tie. Allow branches to fall into place. When adjusting branches be sure all wires are free of branch hinges.
7. Shape each branch. Start with tips closest to the pole; bend one to the right, one to the left, and one up over the center of the branch. Remove the next tie and repeat.
8. After shaping the whole bottom section, step back and take an overall look at the section. Shift tips to fill any gaps.
9. Locate the long extension cord on the bottom section and plug into the wall outlet. Ensure the lights are working.
10. Place the section with the next highest letter into place atop the bottom section. Plug the power cord from this section into the receptacle in the bottom section.
11. Follow steps 6 thru 10 for each section until your tree is complete.

Warning: When Lowering Branches Don't Let Wires Get Caught In Hinges.

Attention: Trees 9" And Above May Come With More Sections Than This Illustration. Some May Have 4 Or 5 Sections Depending On Height. If They Have More Than 3 Sections They Will Be Labeled "D" & "E". Please Assemble Starting With The Highest Letter First And Work Up To Section "A" (Top Section) Last.

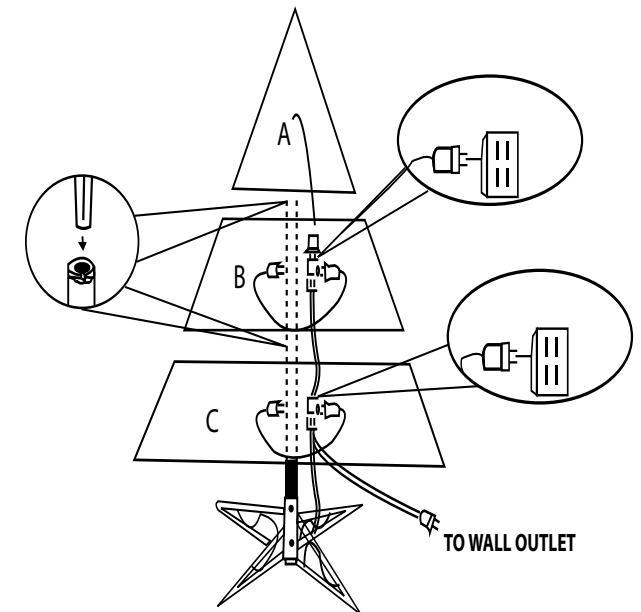

REPLACEMENT OF LIGHTS

1. Grasp plug and remove for the receptacle or other outlet device (surge protector, etc.).
2. Pull lamp and plastic base straight out of lamp holder. Grasp plastic not glass.
3. Replace lamp only with replacement provided with tree.

REPLACEMENT OF FUSES

1. Grasp plug and remove from receptacle or other outlet device (surge protector, etc.).
2. To expose fuse, slide open fuse access cover on top of plug, toward blades.
3. Remove fuse from holder.
4. Replace fuse with spare from other side of fuse compartment.
5. Slide fuse cover closed.
6. If fuse blows again contact dealer for assistance.

STORAGE INSTRUCTIONS

1. Unplug extension cord from wall outlet.
2. Unplug each section from the section below.
Do not unplug each light set.
3. Gently lift off the top and middle sections, and remove bottom section from stand.
4. Carefully place each section in original box or tree storage bag, seal shut and store in a cool, dry place where the temperature does not exceed 100 F.

LIMITED 5 YEAR WARRANTY

The manufacturer warrants this product to be free of manufacturing defects for a period of 5 years excluding lights, which are warranted for a period of 1 year from the date of purchase. The manufacturer will replace such defective parts at no charge. The consumer's sole remedy shall be such replacement as expressly provided above and the manufacturer shall in no event be liable for any incidental or consequential damages arising out the use of, or inability to use this product for any purpose whatsoever. This limited warranty does not cover damage resulting from accident, misuse, abuse, negligence, or normal wear. Contact the dealer where purchased for claims.

TREE ASSEMBLY AND SAFETY INSTRUCTIONS

